


CPC Pipe Cable Cover Kit Installation Instructions

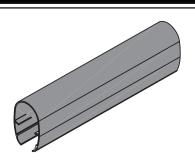


The CPC Pipe Cable Covers fit over pipes and tubing. Conceal cables and electrical conduits by running them alongside the pipe or tubing. The CPCs fit $1 \frac{1}{2} "$ pipes, 2" pipes, 2" tubing, 1"x1" square tubing, and Premier Mounts' elliptical tubing.

Step 1

After you have completed installing the A/V components, choose the appropriate CPC length for the pipe or tubing.



You may use multiple CPCs together to conceal all cable and electrical wiring.

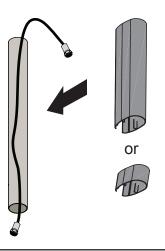

Step 2


Clasp the CPC over the cabling or wiring, and pipe or tubing (Figure 1).



Make sure the pipe or tubing is outside the inner ribs of the CPC (Figure 2).



Clasp the CPC over the wide side of the elliptical tubing (Figure 2).

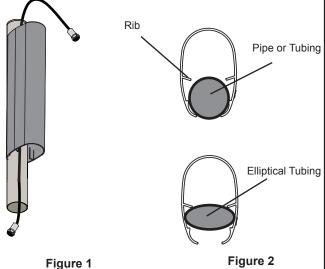




3130 East Miraloma Avenue Anaheim, CA 92806 USA USA and Canada

Phone: 1.800.368.9700 Fax: 1.800.832.4888

Other Locations - Phone: (001).714.632.7100; Fax: (001).714.632.1044 ©Premier Mounts 2010

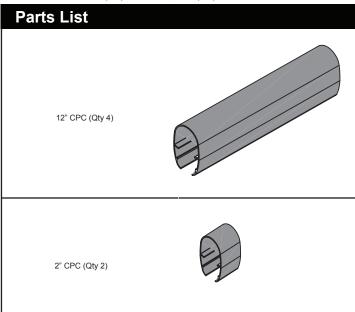

Step 3

Clasp additional CPCs as needed.



Clasp multiple CPCs over the pipe or tubing to cover the length of the cabling and/or wiring.

